

## INSTALLATION

English

### WARNINGS AND CAUTIONS:

- TO BE INSTALLED AND/OR USED IN ACCORDANCE WITH APPROPRIATE ELECTRICAL CODES AND REGULATIONS.
- IF YOU ARE NOT SURE ABOUT ANY PART OF THESE INSTRUCTIONS, CONSULT AN ELECTRICIAN.

### DESCRIPTION:

The Single Rocker Self-Powered Wireless Light Switch is a battery-free wireless transmitter that communicates with a wide variety of receivers. Every time the switch is pressed a micro-generator produces a small electrical current that powers a built-in transmitter. This transmitter sends wireless signals that command the receiver to turn a device off or on. With an appropriate receiver, the switch can also be used to control the dimming of lights.

### COMPATIBLE DEVICES:

- 3-Wire Relay
- 5-Wire Relay
- Plug-in Dimmer/Relay
- 4-Channel Low Voltage Receiver
- Room Controller
- Thermostat
- More receivers available

### EQUIPMENT NEEDED FOR INSTALLATION

- Slotted Screwdriver
- Phillips screwdriver
- Double sided foam mounting tape (for adhesive mounting)
- Plastic wall anchors and screws (for screw mounting)

### PROGRAMMING AND ACTIVATION:

1. **Do not mount the switch until after it has been programmed** to communicate with all appropriate receivers. Test the range of the wireless light switch before mounting.
2. **Make sure the switch is within 16 feet (5 meters) of the desired receiver when programming.** Receivers have reduced range during programming.
3. **Programming:** To associate a wireless light switch with a receiver, simply press the rocker of the wireless light switch while the receiver is in the desired Program Mode (see receiver instructions for information on how to program the receiver).
4. **Activation:** Once a wireless light switch has been associated with a receiver, simply press the rocker on the wireless light switch to control the load.  
**PLEASE NOTE:** Do not attempt to activate the load while the receiver is in Program Mode or the switch may be accidentally added or deleted from memory.

### INSTALLATION

Wireless light switches can be mounted in a standard switch box or surface mounted using screws or adhesive.

#### SCREW SURFACE MOUNT:

1. If necessary, drill pilot holes into the wall.
2. Use suitable screws (not included) to mount the wireless light switch to the wall.
3. Attach the Switch to the Back Plate using the included 6 x 3/8" screws (C).
4. Attach the faceplate after the switch has been attached to the wall (Faceplate screws are included).

#### ADHESIVE SURFACE MOUNT:

1. Attach the Switch to the Back Plate using the included 6 x 3/8" screws (C).
2. Attach the faceplate to the Switch and Back Plate assembly (Faceplate screws are included).
3. Apply adhesive tape to the Back Plate of the switch.
4. Affix the switch to the wall.

#### SWITCH BOX MOUNT:

1. Set aside the Back Plate. It is not needed for this installation.
2. Attach the switch into the screw holes on the switch box using the 6-32 x 3/4" machine screws (B).
3. Attach the faceplate after the switch has been attached to the switch box (Faceplate screws are included).

#### FCC COMPLIANCE STATEMENT:

Contains FCC ID: SZV-PTM200C, Contains IC: 5713A-PTM200C  
The enclosed device complies with Part 15 of the FCC Rules.  
Operation is subject to the following two conditions:  
(i.) This device may not cause harmful interference  
(ii.) This device must accept any interference received, including interference that may cause undesired operation.

Leviton is a registered trademark of Leviton Mfg. Co. in the United States, Canada, Mexico, and other countries. Other trademarks herein are the property of their respective owners.

SPECIFICATIONS		
	WSS0S-D0x	WSS0S-D2x
Range	50-150 feet (typical)	
Frequency	315 MHz	
Power Supply	Self-generated when switch is pressed	
Channels	2 Buttons (1 Rocker)	4 buttons (2 rockers)
Output Channels	Only limited by number of receivers in range	
Dimensions	2.75 (W) x 4.5 (H) x 0.62 (D) inches	
Radio Certification	FCC (United States) SZV-PTM200C I.C. (Canada) 5713A-PTM200C	
Addressing	Factory set unique ID (1 of 4 billion)	

#### LIMITED 2 YEAR WARRANTY AND EXCLUSIONS

Leviton warrants to the original consumer purchaser and not for the benefit of anyone else that this product at the time of its sale by Leviton is free of defects in materials and workmanship under normal and proper use for two years from the purchase date. Leviton's only obligation is to correct such defects by repair or replacement, at its option, if within such two year period the product is returned prepaid, with proof of purchase date, and a description of the problem to **Leviton Manufacturing Co., Inc., Att: Quality Assurance Department, 201 North Service Road, Melville, New York 11747**. This warranty excludes and there is disclaimed liability for labor for removal of this product or reinstallation. This warranty is void if this product is installed improperly or in an improper environment, overloaded, misused, opened, abused, or altered in any manner, or is not used under normal operating conditions or not in accordance with any labels or instructions. **There are no other or implied warranties of any kind, including merchantability and fitness for a particular purpose,** but if any implied warranty is required by the applicable jurisdiction, the duration of any such implied warranty, including merchantability and fitness for a particular purpose, is limited to two years. **Leviton is not liable for incidental, indirect, special, or consequential damages, including without limitation, damage to, or loss of use of, any equipment, lost sales or profits or delay or failure to perform this warranty obligation.** The remedies provided herein are the exclusive remedies under this warranty, whether based on contract, tort or otherwise.