

Commercial Meter Pedestals - Mounting Base Details


Installation Instructions

CMP-4000 Series

Meter pedestals are designed for pad-mount installation. Two methods can be used to install pedestals on a concrete pad.

- Use pre-fabricated mounting base assembly.
 - Cat. No. MB1515 - Suitable for 15" wide x 15" deep pedestals.
 - Cat. No. MB2015 - Suitable for 20" wide x 15" deep pedestals.

Install mounting base assembly flush with top surface of concrete pad, allowing mounting studs to reach above pad. Locate line and load conduits in the designated areas as shown on drawings below.

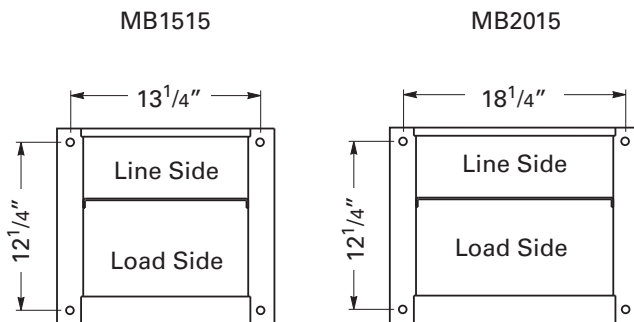

- Use anchor bolts (3/8" dia.) pre-cast in concrete pad. Mounting hole dimensions are shown above for 15 x 15 and 20 x 15 pedestals. Locate line and load conduits the same as in method 1.


Installation Instructions

CMP-4900 Series

Meter pedestals are designed for pad-mount installation. Two methods can be used to install pedestals on a concrete pad.

- Use pre-fabricated mounting base assembly.
 - Cat. No. MB2820 - Suitable for 28" wide x 20" deep pedestals. (CMP-4900 Models)

Install mounting base assembly flush with top surface of concrete pad, allowing mounting studs to reach above pad. Locate line and load conduits in the designated areas as shown on drawing below.

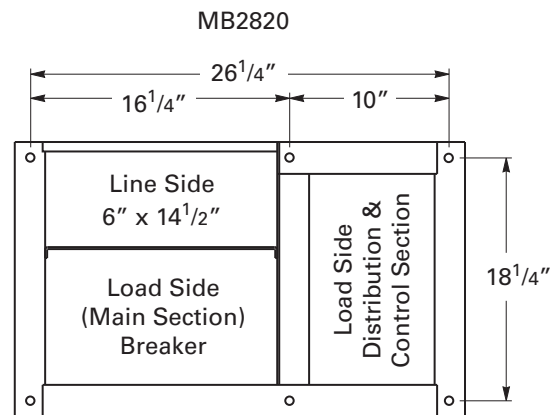

- Use anchor bolts (3/8" dia.) pre-cast in concrete pad. Mounting hole dimensions are shown above. Locate line and load conduits the same as in method 1.