# WPLED<sup>®</sup> 26W INSTALLATION INSTRUCTIONS



Thank you for buying RAB lighting fixtures. Our goal is to design the best quality products to get the job done right. We'd like to hear your comments. Call the Marketing Department at 888-RAB-1000 or email: marketing@rabweb.com





### IMPORTANT

Junction Box

Surface Mount

### READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

Fixtures must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

WARNING: Make certain power is OFF before installing or maintaining fixture. No user serviceable parts inside.

CAUTION: For proper weatherproof function all gaskets must be seated properly and all screws inserted and tightened firmly. Apply weatherproof silicone sealant around the edge of the Back Box and/or Junction Box. This is especially important with an uneven wall surface. Silicone all plugs and unused conduit entries.

# JUNCTION BOX MOUNT FOR CONDUIT

For use on applications where conduit wiring is needed.


- 1. Loosen (4) Lens Screws and swing open Hinged Door. Screws will remain in place with O-Rings.
- 2. Loosen and remove (2) Housing Screws. Remove Housing from Back Box. Keep Housing Gasket intact for re-assembly.
- 3. Feed wires into Back Box through Silicone Wiring Plug, if not using conduit/ connectors.
- 4. Secure **Back Box** to the mounting surface using hardware appropriate for that mounting surface. Silicone around the edge of **Back Box Gasket** (self adhesive) and/ or junction box.
- 5. Wire the fixture using UL listed wire connectors according to NEC and local codes. Apply sealant to all unused conduit entry points.
- 6. Place Gasket between Back Box and Housing. Re-mount Housing to Back Box. Check Housing Gasket seal all around the Back Box.
- 7. Re-mount **Door** to **Housing**. Tighten (4) **Lens Screws.** Check door gasket (not shown) seal.
- 8. Fixture is UL Listed for down and up lighting and may be mounted in either position. Fixture may not melt heavy snow accumulation in an uplight position.

### Housing Housing **Back Box** Gasket **Back Box** Gasket Housina Screws **Silicone Wiring Plug** Hinaed Door Lens Screws

# SURFACE MOUNT FOR RECESSED **JUNCTION BOX**

For use with recessed junction box and wiring.

- 1. Mount Surface Plate to fixture with (4) Surface Plate **Screws**. There are two screws from the front and two screws from the back. Make sure Housing Gasket makes complete seal all the way around.
- 2. Use supplied crossbar. Mount Crossbar to recessed junction box with (2) screws.
- 3. Place Junction Box Gasket on back of the fixture. Gasket should create seal against mounting surface.
- 4. Wire fixture to supply wires in recessed junction box according to wiring section.
- 5. Use 1/4 x 20 stainless steel **Mounting Screw** to attach fixture to Crossbar. Tighten Mounting Screw.
- 6. Cover screw with Cap, provided.
- 7. Fixture is UL Listed for down and up lighting and may be mounted in either position. Fixture may not melt heavy snow accumulation in an uplight position.

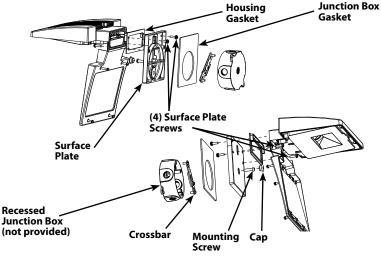


# WPLED<sup>®</sup> 26W INSTALLATION INSTRUCTIONS



Thank you for buying RAB lighting fixtures. Our goal is to design the best quality products to get the job done right. We'd like to hear your comments. Call the Marketing Department at 888-RAB-1000 or email: marketing@rabweb.com

# JUNCTION BOX

- 1. The Junction box has (4) conduit entry points on the center of each side and (1) in the center back.
- 2. Mounting Points are dimensioned below.

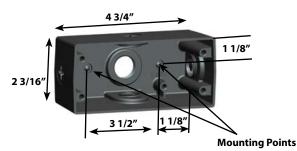

### **CLEANING & MAINTENANCE**

#### CAUTION: Be sure fixture temperature is cool enough to touch. Do not clean or maintain while fixture is eneraized.

- 1. Clean glass lens with non-abrasive glass cleaning solution.
- 2. Do not open fixture to clean the LED. Do not touch the LED.


# TROUBLESHOOTING

- 1. Check that the line voltage at fixture is correct. Refer to wiring directions.
- 2. Is the fixture is grounded properly?
- 3. Be sure the photocell, if used, is functioning properly.

# **ON-OFF WIRING**

Universal voltage driver permits operation at 100V to 277VAC. 50 or 60Hz except fixtures factory ordered with a 120V photocell (/PC) and 277V photocell (/PC2). For Non-Dimming, follow the wiring directions as in fig. 1.

- 1. For Junction Box Mount, feed wires through silicone wiring plug into the junction box.
- 2. Connect the black fixture lead to the (+) LINE supply lead.
- 3. Connect the white fixture lead to the (-) COMMON supply lead.
- 4. Connect the bare copper Ground wire from fixture to supply ground.



# 0-10V DIMMABLE WIRING

Universal voltage driver permits operation at 120V thru 277V, 50 or 60 Hz. For 0-10V Dimming, follow the wiring directions as in fig. 2.

- 1. For Junction Box Mount, feed wires through silicone wiring plug into the junction box.
- 2. Connect the black fixture lead to the (+) LINE supply lead.
- 3. Connect the white fixture lead to the (-) COMMON supply lead.
- 4. Connect the GROUND wire from fixture to supply ground. Do NOT connect the GROUND of the dimming fixture to the output.
- 5. Connect the purple fixture lead to the (V+) DIM lead.
- 6. Connect the gray fixture lead to the (V-) DIM lead.

BLACK

WHITE

PURPLE

GRAY Vaux 12V YELLOW

GROUND

(+) LINE

(-) COMMON

(+) DIM V+

(-) DIM V-

GROUND

7. Cap the yellow fixture lead, if present. Do NOT connect.

PATENTS: US: pat. D634,878, CN: ZL201030679778.2

Note: These instructions do not cover all details or variations in equipment nor do they provide for every possible situation during installation, operation or maintenance.

### **Easy Installation & Product Help**

TING **Tech Help Line** ©2013 RAB LIGHTING Inc. Call our experts 888 RAB-1000 Northvale, New Jersev 07647 USA

GH

WPLED26-IN 1213

rabweb.com Visit our website for product info LIGHT

FIXTURE

Fig. 2

# RAB

# WPLED26 EMERGENCY INSTALLATION SHEET



Thank you for buying RAB lighting fixtures. Our goal is to design the best quality products to get the job done right. We'd like to hear your comments. Call the Marketing Department at 888-RAB-1000, or email: marketing@rabweb.com

### IMPORTANT

#### READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.


RAB fixtures must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

WARNING: Make certain power is OFF and batteries are DISCONNECTED before installing or maintaining fixture. No user serviceable parts inside.


### MOUNTING

CAUTION: Suitable for Wet Locations as Downlight and Wall Mount only.

- 1. Loosen and remove (4) **Screws** and separate **Back Box** from Emergency Housing. Use provided tether.
- 2. Drill necessary holes on **Back Box**. Measurements of drill positions are shown below.
- 3. Match the hole pattern and place the **Gasket** on the **Back Box**.
- 4. Secure the **Back Box** on the surface with hardware appropriate for the mounting surface.
- Wire the fixture to the incoming supply wires according to NEC and local codes. Use UL listed wire connectors.
- For WPLED26/E, each battery unit has one connector. For WPLED26/EC, each battery unit has two connectors as shown below. For details refer to the appropriate Wiring Diagram section and supplied Instruction Sheet.
- Connect the battery connectors. DO NOT connect the **Batteries** before wiring the fixture to the supply.
- 8. Secure Housing to Back Box. Check Housing Gasket seal all around.
- Apply sealant to all unused conduit entry points. To ensure weatherproof seal, apply weatherproof silicone sealant around the edge where the fixture meets the wall.

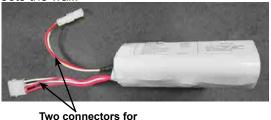

WPLED26/EC

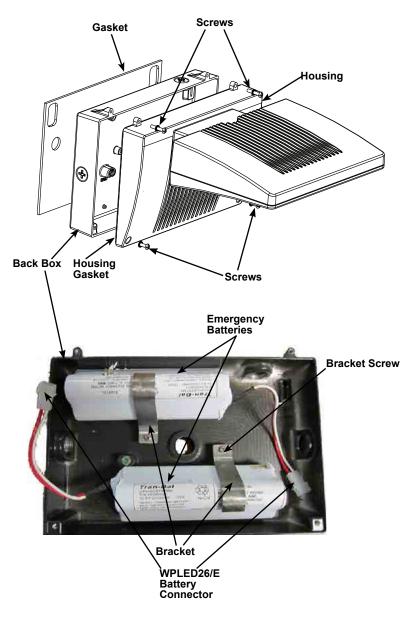

# WPLED26 EMERGENCY INSTALLATION SHEET

### **CLEANING & MAINTENANCE**


CAUTION: Be sure fixture temperature is cool enough to touch. Do not clean or maintain while fixture is energized.

- 1. Clean glass lens & fixture with non-abrasive glass cleaning solution.
- 2. Do not open fixture to clean the LED. Do not touch the LED.


US: Pat. D634,873; CN: ZL 201030129137.X; MX: 32491; TW: D139540; CA: RAB Lighting Inc. Patent Pending.

Note: These instructions do not cover all details or variations in equipment nor do they provide for every possible situation during installation, operation or maintenance.

# DRILL TEMPLATE

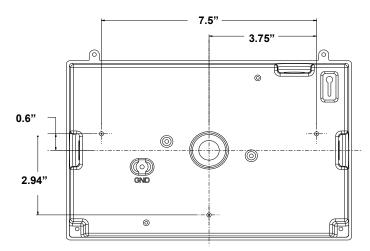


### WPLED26/E WIRING DIAGRAM (Refer to next page for WPLED26/EC wiring diagram)

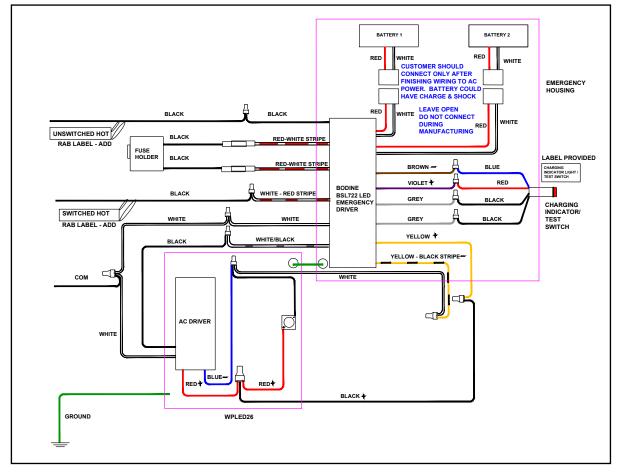

# WPLED26 EMERGENCY INSTALLATION SHEET

### WPLED26/EC WIRING DIAGRAM (Refer to previous page for WPLED26/E wiring diagram)

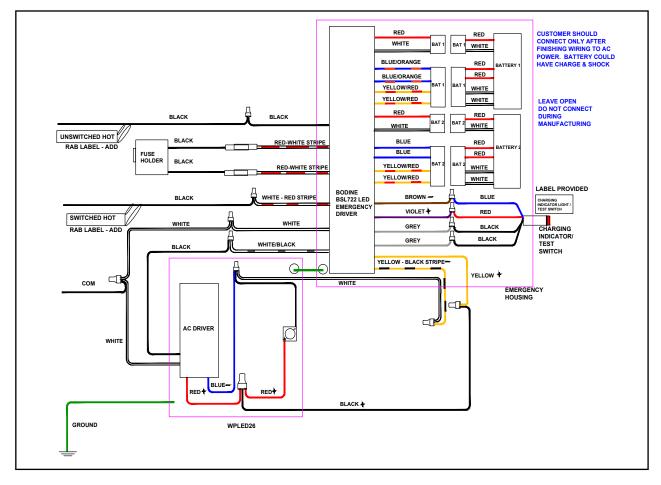



# Easy Installation & Product Help

**Tech Help Line** Call our experts 888 RAB-1000

ine Toll Free Fax Send a fax to RAB 888 RAB-1232 *rabweb.com* Visit our website for product info

*e-mail* Answered promptly sales@rabweb.com